



Installation Instructions & User's Manual



www.VISIONXUSA.com

VISION X VORTEX HEADLIGHT



About the 7" LED Headlight:



H4 adapter or other wiring adapter should be used to power headlight

H13 adapter available - H9-H11 Dual Power Adapter Available

FEATURES

1. Fits on Jeeps, Classic Cars
2. Multiple Wiring Connectors Available
3. Halo LED Ring

7" VORTEX SERIES SPECIFICATIONS

1. Warranty : Extended
2. Amp Draw : High 1.5A / Low 1.1A / Halo 0.17A @ 12V
3. Approval : DOT
4. Beam Patterns : High, Low, Halo
5. LED Lifespan : 50,000 Hours

PREPARATION

1. We recommend completely reading instructions before installing.
2. Consult your local state regulatory agency regarding the use of LED lighting.
3. The placement of LED lighting should not restrict airflow to the radiator, or block head lamps, turn signals, or parking lights.

MAINTENANCE


1. All Vision X models have been designed for maintenance free use. In the case an LED lamp or other part replacement is needed please contact your authorized service center.

SEE VEHICLE OWNERS MANUAL FOR HELP REPLACING HEADLIGHT
ADDITIONAL WIRING HARNESS ADAPTER MAY BE NEEDED
CONSULT YOUR DEALER TO DETERMINE IF ONE IS NEEDED

HALO WIRING INSTRUCTION


1. Disconnect vehicle battery prior to installation
2. Review your vehicle manual for detailed instructions for removing existing factory head light housing.
3. Attach Vortex LED Headlight to existing factory plug and re-install according to your vehicles manual.
4. To wire the LED Halo Daytime Running light, locate the white wire on the back of the Vortex light. Power the white wire by attaching it to the accessory power of the vehicle if there isn't accessory power available affix it to the blue wire of the Vortex.

XIL-7RD WIRING DIAGRAM

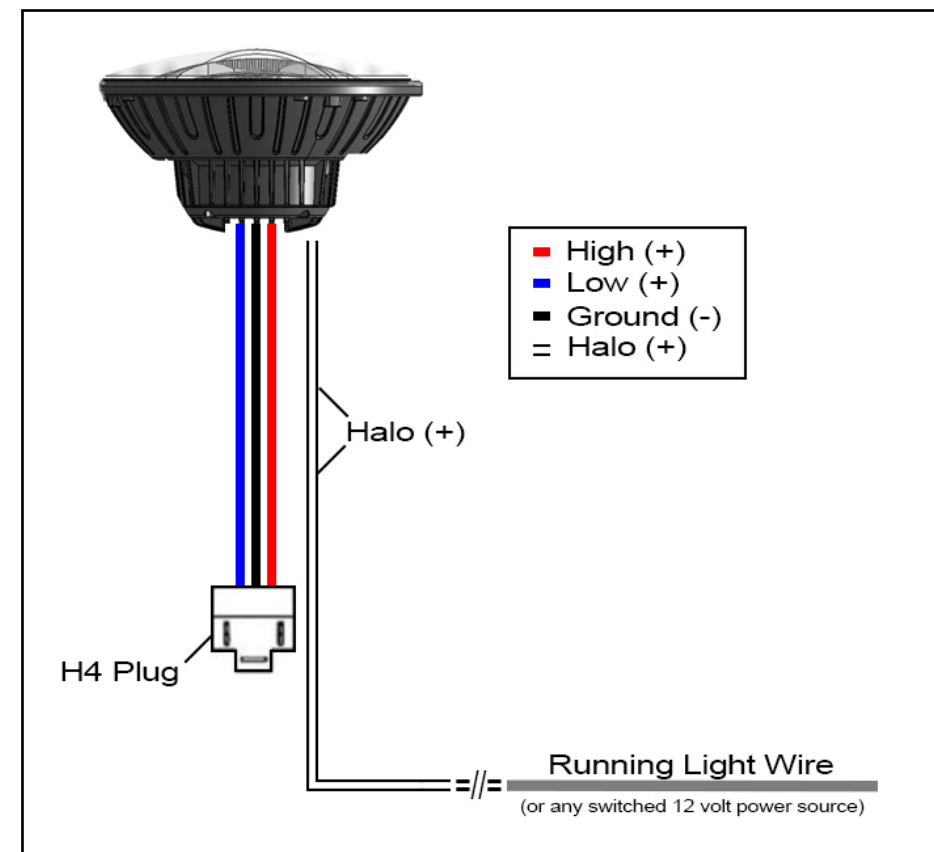



Headlamp Alignment

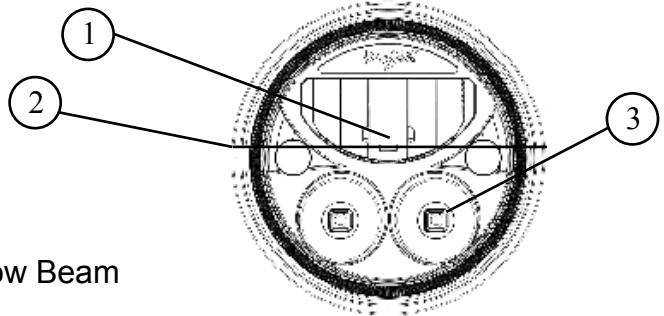

STEP 1: Low Beam

STEP 2: Center line of Low Beam

STEP 3: High Beam

TESTING THE LIGHT

1. After all connections have been made start your vehicle and test your switch to make sure it turns on the light prior to reassembly of the faring.
2. Make sure the angle of your light is correct, otherwise adjust the light angle again.
3. Make sure no wire or other components of the harness are exposed to water spray, excessive heat, or moving parts.

TIP: Vision X recommends checking each bolt and nut, as well as the connectors after driving your vehicle for an extended period of time to ensure that each light is securely mounted.

